

## EXPLANATION OF IFR TERMS AND SYMBOLS

The discussions and examples in this section will be based primarily on the IFR (Instrument Flight Rule) Enroute Low Altitude Charts. Other IFR products use similar symbols in various colors (see Section 4 of this guide). The chart legends list aeronautical symbols with a brief description of what each symbol depicts. This section will provide a more detailed discussion of some of the symbols and how they are used on IFR charts.

NOAA charts are prepared in accordance with specifications of the Interagency Air Cartographic Committee (IACC), which are approved by representatives of the Federal Aviation Administration, the Department of Commerce, and the Department of Defense. Some information on these charts may only apply to military pilots.

## AIRPORTS

All active airports with hard-surfaced runways of 3000' or longer are shown on NOAA IFR Enroute Charts. All active airports with approved instrument approach procedures are also shown regardless of runway length or composition. Charted airports are classified according to the following criteria:

**Green**—Airports and seaplane bases with an approved Low Altitude Instrument Approach Procedure published in the NOAA TPP (Terminal Procedures Publication) volumes.

**Blue**—Airports with an approved Department of Defense (DOD) Low Altitude Instrument Approach Procedure and/or DOD RADAR MINIMA published in DOD FLIPS (Flight Information Publications), the Supplement Alaska or the Terminal Alaska volume.

**Brown**—Airports and seaplane bases that do not have a published Instrument Approach Procedure.

Airports are plotted in their true geographic position unless the symbol conflicts with a radio aid to navigation (navaid) at the same location. In such cases, the airport symbol will be displaced, but the relationship between the airport and the navaid is retained.


Airports are identified by the airport name. In the case of military airports, the abbreviated letters AFB (Air Force Base), NAS (Naval Air Station), NAF (Naval Air Field), MCAS (Marine Corps Air Station), AAF (Army Air Field), etc., appear as part of the airport name.

Airports marked "Pvt" immediately following the airport name are not for public use, but otherwise meet the criteria for charting as specified above.

Runway length is the length of the longest active runway (including displaced thresholds but excluding overruns) and is shown to the nearest 100 feet using 70 feet as the division point; e.g., a runway of 8,070' is labeled 81.

The following runway compositions (materials) constitute a hard-surfaced runway: asphalt, bitumen, concrete, and tar macadam. Runways that are not hard-surfaced have a small letter "s" following the runway length, indicating a soft surface.

1. Parentheses around airport name indicates no military landing rights available (U.S. only)
2. A solid line box enclosing the airport name indicates FAR 93 Special Requirements - see Directory/Supplement
3. "NO SVFR" above the airport name indicates FAR 91 fixed-wing special VFR flight is prohibited
4. Pvt - Private use
5. [C] or [D] following the airport name indicates Class C or Class D Airspace.

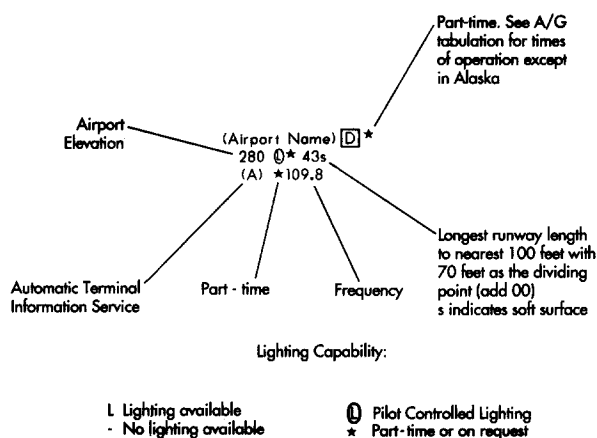

An "L" following the elevation under the airport name means that runway lights are on during hours of darkness. A circle around the "L" indicates there is Pilot Controlled Lighting. A star beside the "L" means the lighting is less than continuous. The pilot should consult the Airport/Facility Directory for light operating procedures. The Airman's Information Manual thoroughly explains the types and uses of airport lighting aids.

## RADIO AIDS TO NAVIGATION (NAVAIDS)

All IFR radio nav aids that have been flight-checked and are operational are shown on IFR enroute charts. VHF/UHF nav aids (VORs, TACANs, and UHF NDBs) are shown in black, and LF/MF nav aids (Compass Locators and Aeronautical or Marine NDBs) are shown in brown.

On enroute charts, information about radio nav aids is boxed as illustrated below. To avoid duplication of data, when two or more radio nav aids in a general area have the same name, the name is usually printed only once inside an identification box with the frequencies, TACAN channel numbers, identification letters, or Morse Code identifications of the different nav aids all shown in appropriate colors. The decision to use separate or combined boxes is made in each case on the basis of reducing chart clutter and providing clear identification of the radio nav aids.

In extremely congested areas, the nav aid box will contain only the 3-letter identifier, and you will find the complete nav aid box in the nearest open area on the chart.

Radio nav aids that may be scheduled for some alteration within the lifespan of the charts have an operational note added. This operational note may include the projected dates and new frequency, when known, and advises the pilot of the contemplated action. The affected component is indicated by diagonal lines over the frequency or channel.

**CHECK NOTAMS**

**PINE BLUFF (T)**  
~~116.0 PBF 80(Y) 3333~~  
 N34°14.81' W91°55.57'

VOR with TACAN compatible DME  
 Underline indicates No Voice Transmitted on this frequency

TACAN channels are without voice but not underlined

Overprint of affected data indicates Abnormal Status, i.e. CHECK NOTAMS

- (T) Frequency Protection usable range at 12,000' AGL - 25NM
- (Y) TACAN must be placed in "Y" mode to receive distance information
- HWAS - Hazardous Inflight Weather Advisory Service
- ⊙ TWEB - Transcribed Weather Broadcast

Enroute weather, when available, is broadcast on the associated NAVAID frequency. For terminal weather frequency see A/G Voice Communication Tab under associated airport (U.S. only)

Part-time or On-Request

**MALVERN**  
 215 MVQ 86 113.9

NDB with DME  
 DME channel and paired VHF frequency are shown

123.6 122.1R  
**HARRISON**  
 112.5 HRO 72  
 N36°19.10' W93°12.80'

FSS associated with a NAVAID

123.6 122.65  
**EL DORADO ELD**  
 Name and Identifier of FSS not associated with NAVAID

**JONESBORO 122.55**  
 Remote Communications Outlet (RCO) FSS name and remoted frequency are shown

SHADOW BOXES indicate Flight Service Stations (FSS). Frequencies 122.2, 255.4 and emergency 121.5 and 243.0 are normally available at all FSS's and are not shown. All other frequencies are shown. Certain FSSs provide Local Airport Advisory (LAA) on 123.6. Frequencies transmit and receive except those followed by R or T: R - Receive only T - Transmit only

122.6  
**PINE BLUFF**  
 116.0 PBF 107  
 N34°14.81' W91°55.57'

Controlling FSS Name **JONESBORO**

Frequencies positioned above thin line NAVAID boxes are remoted to the NAVAID site. Other frequencies at the controlling FSS named are available, however, altitude and terrain may determine their reception.

Thin line NAVAID boxes without frequencies and controlling FSS name indicates no FSS frequencies available

**CONTROLLED AIRSPACE**

Controlled airspace consists of those areas where some or all aircraft may be subjected to air traffic control within the following airspace classifications of A, B, C, D, & E.

Class A Airspace is depicted as open area (white) on the Enroute High Charts. It consists of airspace from 18,000 MSL to FL600.

Class B Airspace is depicted as screened blue area with a solid line encompassing the area.

Class C Airspace is depicted as screened blue area with a dashed line encompassing the area.

Class B and Class C Airspace consist of controlled airspace extending upward from the surface or a designated floor to specified altitudes, within which all aircraft and pilots are subject to the operating rules and requirements specified in the Federal Aviation Regulations (FAR) 71. Class B and C Airspace are shown in abbreviated forms on Enroute Low Altitude charts. A general note adjacent to Class B airspace refers the user to the appropriate VFR Terminal Area Chart.


Class D Airspace (airports with an operating control tower) are depicted as open area (white) with a "D" enclosed within a box following the airport name.

Class E Airspace is depicted as open area (white) on the Enroute Low Charts. It consists of airspace below 18,000 MSL.


Airports within which fixed-wing special VFR flight is prohibited are shown as:

**NO SVFR AIRPORT NAME**

Air Route Traffic Control Centers (ARTCC) are established to provide Air Traffic Control to aircraft operating on IFR flight plans within controlled airspace, particularly during the enroute phase of flight. Boundaries of the ARTCCs are shown in their entirety using the symbol below. Center names are shown adjacent and parallel to the boundary line.




ARTCC sector frequencies are shown in boxes outlined by the same symbol.



### SPECIAL USE AIRSPACE

Special use airspace confines certain flight activities or restricts entry, or cautions other aircraft operating within specific boundaries. Special use airspace areas are depicted on aeronautical charts. Special use airspace areas are shown in their entirety, even when they overlap, adjoin, or when an area is designated within another area. The areas are identified by type and identifying number or name (R-4001), effective altitudes, operating time, weather conditions (VFR/IFR) during which the area is in operation, and voice call of the controlling agency, on the back or front panels of the chart. Special Use Airspace with a floor of 18,000' MSL or above is not shown on the Enroute Low Altitude Charts. Similarly, Special Use Airspace with a ceiling below 18,000' MSL is not shown on Enroute High Altitude Charts.

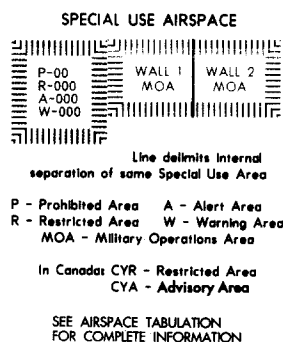

### OTHER AIRSPACE

Mode C Required Airspace (from the surface to 10,000' MSL) within 30 NM radius of the primary airport(s) for which a Class B airspace is designated, is depicted on Enroute Low Altitude Charts. Mode C is also depicted within 10 NM of all airports listed in Appendix D of FAR 91.215 and the Airman's Information Manual (AIM).

Mode C is required within the limits of a Class C airspace up to 10,000' MSL.

### INSTRUMENT AIRWAYS

The FAA has established two fixed route systems for air navigation. The VOR and LF/MF (low or medium frequency) system—designated from 1,200' AGL to but not including 18,000' MSL—is shown on Low Altitude Enroute Charts, and the Jet Route system—designated from 18,000' MSL to FL 450 inclusive—is shown on High Altitude Enroute Charts.

### VOR LF/MF AIRWAY SYSTEM (LOW ALTITUDE ENROUTE CHARTS)

In this system VOR airways—airways based on VOR or VORTAC nav aids—are depicted in black and identified by a "V" (Victor) followed by the route number (e.g., "V12"). In Alaska, some segments of low-altitude airways are based on LF/MF nav aids and are charted in brown instead of black.

LF/MF airways—airways based on LF/MF nav aids—are sometimes called "colored airways" because they are identified by color name and number (e.g., "Amber One", charted as "A1"). Green and Red airways are plotted east and west, and Amber and Blue airways are plotted north and south. Regardless of their color identifier, LF/MF airways are shown in brown. U.S. colored airways exist only in Alaska, those within the conterminous U.S. have been rescinded. (Note: In Mexican airspace on NOAA charts, LF/MF airways are charted in black).


### JET ROUTE SYSTEM (HIGH ALTITUDE ENROUTE CHARTS)

Jet routes are based on VOR or VORTAC nav aids, and are depicted in black with a "J" identifier followed by the route number (e.g., "J12"). In Alaska, some segments of jet routes are based on LF/MF nav aids and are shown in brown instead of black.

### AIRWAY/ROUTE DATA

On both series of Enroute Charts, airway/route data such as the airway identifications, bearings or radials, mileages, and altitude (e.g., MEA, MOCA, MAA) are shown aligned with the airway and in the same color as the airway.

Airways/Routes predicated on VOR or VORTAC nav aids are defined by the outbound radial from the nav aid. Airways/Routes predicated on LF/MF nav aids are defined by the inbound bearing.



### MILITARY TRAINING ROUTES (MTRs)

Military Training Routes (MTRs) are routes established for the conduct of low-altitude, high-speed military flight training (generally below 10,000 feet MSL at airspeeds in excess of 250 knots IAS). These routes are depicted in brown on Enroute Low Altitude Charts, and are not shown on inset charts or on IFR Enroute High Altitude Charts. Enroute Low Altitude Charts depict all IR (IFR Military Training Route) and VR (VFR Military Training Route) routes, except those VRs that are entirely at or below 1500 feet AGL.

Military Training Routes are identified by designators (IR-107, VR-134) which are shown in brown on the route centerline. Arrows indicate the direction of flight along the route. The width of the route determines the width of the line that is plotted on the chart:

Route segments with a width of 5 NM or less, both sides of the centerline, are shown by a .02" line.

Route segments with a width greater than 5 NM, either or both sides of the centerline, are shown by a .035" line.